




GARRO CAR HEATING SOCKET OUTLET ENCLOSURE TYPE KL/ INSTRUCTION ADVICE

Micro circuit breaker (MCB)

Mcb's are switched on, when the leavers are on upright position. If mcb goes off, pull the lever (if needed) first all the way down and then lift it up again.

Buttons

For setting the time forward and backward.

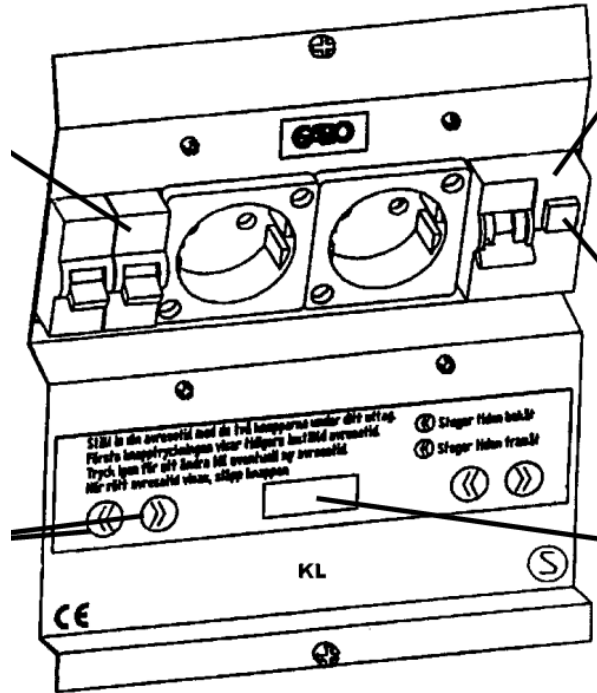

Residual-current device (RCD)

When the device is on, the lever is upright.

Test button

Test button should be pushed regularly (every 6 months) to make sure that the RCD is working correctly.

Display

Indicates the current time.

Digital timer function

The voltage turns on always two hours before the time of departure.

Setting the departure time

Push one of the buttons under your outlet. The display shows your departure time. Set your new departure time by pushing the arrow buttons until the display shows your new departure time.

Setting / changing the local time

Push at the same time both of the buttons on either side of the display until the numbers on the display start to flash. Set the time by pressing the arrow buttons, forward or backward, until the display shows the current time. After a few seconds the numbers will stop flashing and the time is set.

Troubleshoot, resetting the device

In the possible situation of a malfunction the clock can be totally reset by following instructions:

Push two buttons >> and << located closest to the display over three seconds. On the display four zeros start flashing. Now the clock has been reset and the departure time for both outlets is 07.00. The clock with current time and the departure time is possible to set again by following instructions above.